


4WD CONTROL ECU

COMPONENTS

TF

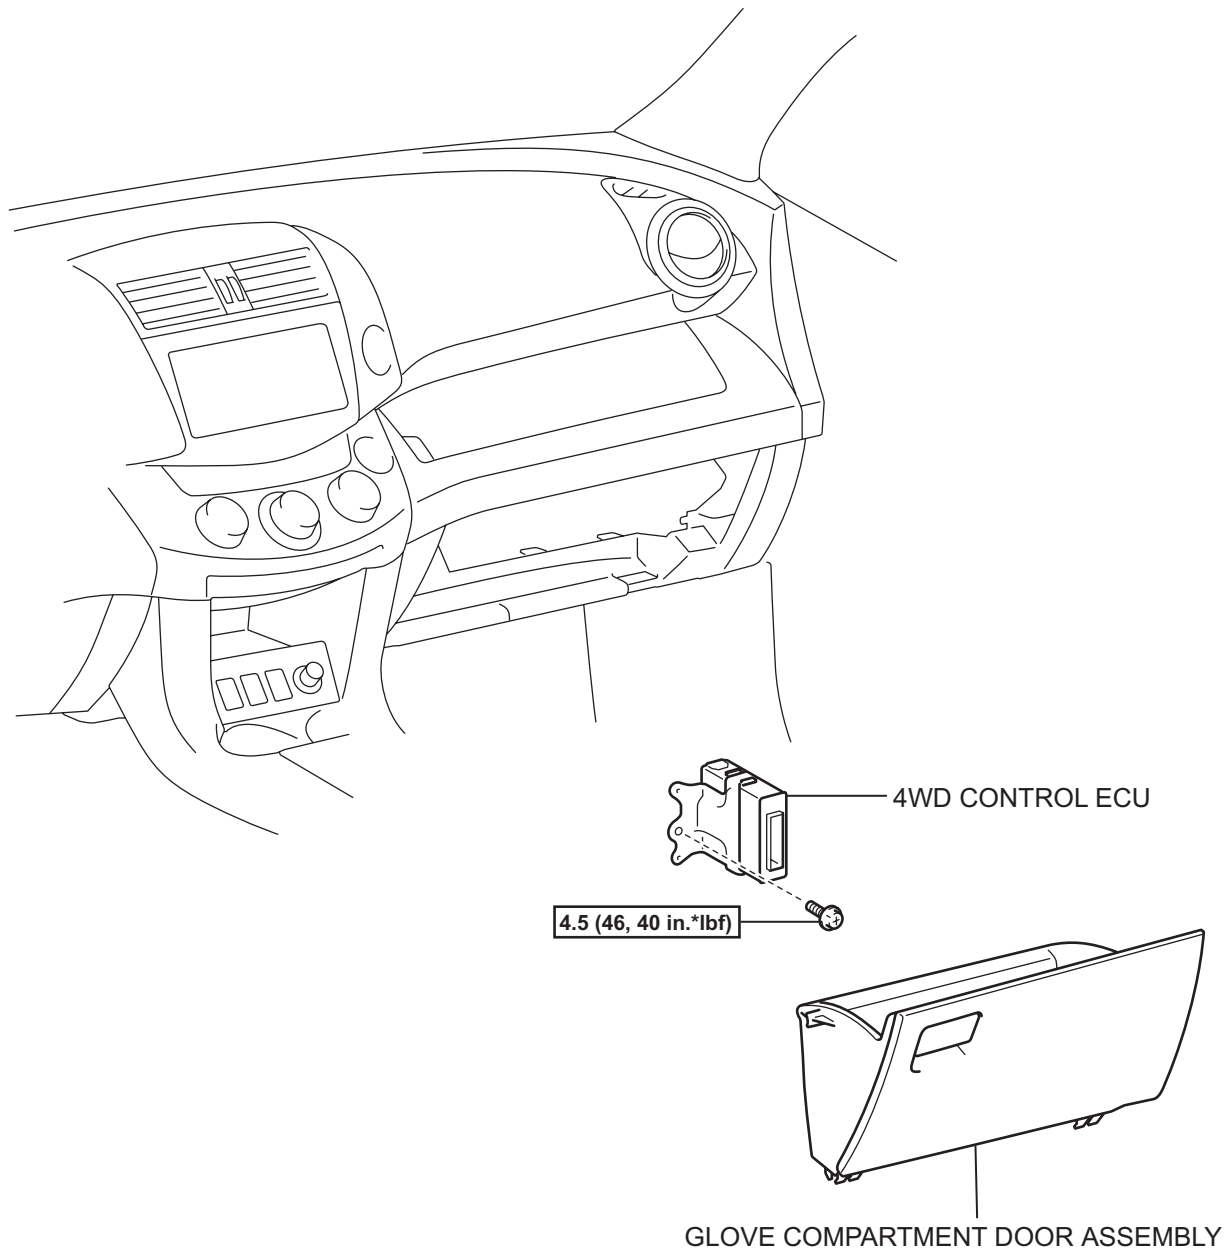

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**



CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-20](#))

3. **REMOVE 4WD CONTROL ECU**

- (a) Disconnect the connector.
- (b) Remove the bolt and ECU.

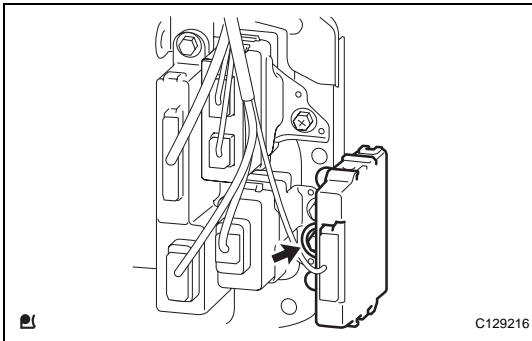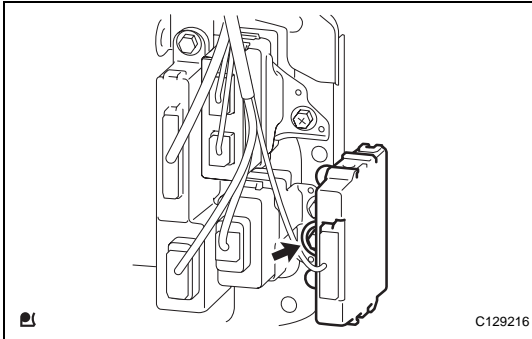

INSTALLATION

1. **INSTALL 4WD CONTROL ECU**

- (a) Install the ECU with the bolt.
Torque: 4.5 N*m (46 kgf*cm, 40 in.*lbf)
- (b) Connect the connector.

2. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-25](#))

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

TF